



American Geothermal Chiller/Heat Pump Winterization Procedure

Winterizing your chillers will protect your equipment from the ramifications of freezing while your chiller is down during the winter. If you need assistance, please give us a call and we would be happy to help.

1. Disconnect water inlet and outlet connections to system
2. Open all water valves (including drain valves) on system
3. Wait till all water has drained out of system & blow the line out with air
4. Connect external pump to water inlet (lowest connection) on system
5. Use external pump to fill water lines with 50/50 antifreeze or RV antifreeze (much cheaper)
6. Allow antifreeze to circulate for about 10 minutes
7. Close all valves once the system water lines are completely filled with antifreeze
8. Inspect system to ensure all water valves are closed tight without leaks

For any questions or further winterization assistance, please contact the American Geothermal service department at 615-890-6985.